

LIGHTHOUSE[®]

USER MANUAL L/H A100MFT MULTI-FUNCTION TRIPOD LIGHT

BEFORE USING FOR THE FIRST TIME

Please ensure you read and understand these instructions clearly before using this product for the first time. Failure to do so could result in personal injury or damage to the product. It is important you retain this user manual for future reference.

- ▶ Ensure the telescopic section of the torch is fully extended before retracting.
- ▶ The telescopic section of the torch may require a few cycles of fully extending and fully retracting before settling at the designed height.
- ▶ The fully extended height of this torch may be more or less than 20mm from the stated height*.

SAFETY PRECAUTIONS

- ▶ Do not use the torch in the immediate vicinity of inflammable materials or gases.
- ▶ Make sure that the torch lens is not covered during use.
- ▶ Only use the accessories included with this product when charging the torch.
- ▶ Keep the torch out of reach of children and pets.
- ▶ Do not point the torch directly in your own, any other person's or animals eyes.
- ▶ Always check the mains cable before using the charger. If the cable or any part of the charger is damaged, replace with a like for like spare.

TECHNICAL DATA

BATTERY TYPE	3.7V Li-ion 18650 1800mAh
MODE	High / Medium / Low
BRIGHTNESS	1000 / 500 / 200 Lumens
RUN TIME	4 / 8 / 19 Hours
CHARGE TIME	Approx. 5 Hours
WATER RESISTANT	IPX4 (Splash Proof)
WEIGHT	740g
MAX HEIGHT	1150mm*
DIMENSIONS	63.2 x 280mm
SUPPLIED WITH	USB-C Charging Lead

RECHARGING

- ▶ Ensure the battery is fully charged before using the tripod light for the first time.
- ▶ It is important for the tripod light to be charged every three months to maintain the optimum condition of the battery.
- ▶ For the best performance, Lithium-Ion batteries should not be stored for prolonged periods without being charged at regular intervals.
- ▶ Self discharge rate is approximately 10% per month.

NOTE:

The charging cable included with this product is for recharging the battery only and cannot be used to directly power the light.

USING THE CHARGING LEAD

Plug the USB-C charging lead into the USB charging socket on the back of the tripod light. Plug the other end of the lead into any suitable USB charging outlet.

While on charge, the charging indicator LEDs will flash blue. All four LEDs will remain illuminated when the battery is fully charged.

CLEANING


Use a soft cloth or cotton swab with water or medical alcohol to clean the lens. Care should be taken during cleaning. Allow the torch to completely dry before using. Do not use any harsh chemicals or abrasive materials when cleaning, as this may damage the torch.

OPERATING THIS TRIPOD LIGHT

The Tripod Lights output functions are controlled by a sequential switch on the side of the light:

- ▶ 1st press: Main LED 100% output
- ▶ 2nd press: Main LED 50% output
- ▶ 3rd press: Main LED 25% output
- ▶ 4th press: OFF

DIAGRAM

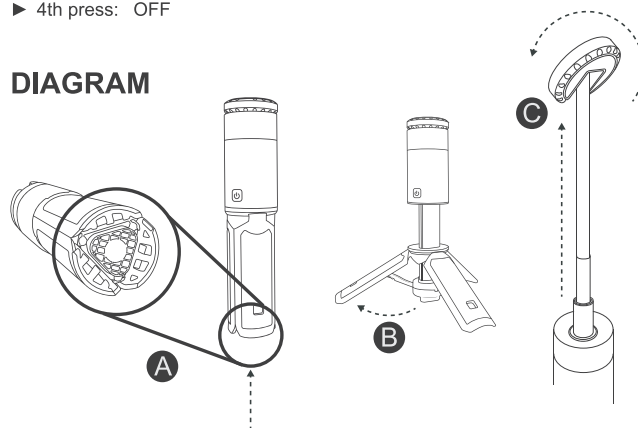

USING AS A TRIPOD LIGHT

While using this product as a conventional hand torch, it may also be extended to use as a tripod light.

To achieve this function, locate the button on the base of the light and push in (A). The legs will spring out, enabling the full stability of the tripod function (B). Once the tripod light is in a fully stable position, the telescopic head can be extended up to a maximum height of 1118mm and the LED unit can be rotated to achieve optimum light coverage (C).

DISPOSAL OF THIS PRODUCT

If at some point you intend to dispose of this product, please keep in mind that many of its components consist of valuable materials which can be recycled. Please do not dispose of this product in the household waste bin, check instead with your local council for recycling facilities in your area.

Do not dispose of used batteries in the household waste, or expose to fire. Lighthouse hold no responsibility for personal injury or damage caused by incorrectly disposing of batteries.

The plastic in this product may contain chemicals known by the state of California to cause cancer and birth defects or other reproductive harm.

GUARANTEE

Rechargeable battery life depends on many factors and the cells can become easily damaged, dependent on environmental and storage conditions. Your product is guaranteed from defect for a period of **1 year**, this excludes the battery which is covered for 90 days from the date of purchase, if you notice the running or charge times decreasing this is normal over the lifetime of the battery and is classed as fair wear and tear.

There will be some items within our range which will be non-serviceable but, in most cases we can supply replacement batteries for our products.



LIGHTHOUSE TORCHES

3 White Lodge Business Estate, Hall Road, Norwich, Norfolk, NR4 6DG, United Kingdom.

TUCKS O'BRIEN LTD

24 Magna Drive, Magna Business Park, Citywest Road, Dublin 24, D24 FNYO, Ireland.



www.lighthouse-torches.com

