

LIGHTHOUSE®

USER MANUAL L/H SLT18S 18W SITE LIGHT

BEFORE USING FOR THE FIRST TIME

Please ensure you read and understand these instructions clearly before using this product for the first time. Failure to do so could result in personal injury or damage to the product. It is important you retain this user manual for future reference.

SAFETY PRECAUTIONS

- ▶ Do not use the site light in the immediate vicinity of inflammable materials or gases.
- ▶ Make sure that the light is not covered during use.
- ▶ Do not use this site light if any part is damaged.
- ▶ Keep the site light out of reach of children and pets.
- ▶ Do not point the beam directly in your own, any other person's or animals eyes.
- ▶ Always check the mains cable before using the site light. If any part appears damaged, do not use until repaired by a qualified technician. If any repair has been carried out by unauthorised personnel, it may void any warranty associated with this product.
- ▶ Always check that the voltage displayed on the product is the same as the power source.
- ▶ Never use an electrical appliance in the rain, in wet areas or with wet hands. Using an electrical appliance under these conditions greatly increases the possibility of electric shock.

TECHNICAL DATA

BRIGHTNESS	2000 Lumens
LED COLOUR	6500K
LED POWER	18W
LIGHT SOURCE	SMD LED
LED LIFETIME	50,000 Hours
BEAM ANGLE	120°
MAX HEIGHT	1935mm
MIN HEIGHT	970mm
IP RATING	IP44
CABLE LENGTH	3 Metres
SUPPLIED VOLTAGE	230VAC (50Hz)

CLEANING

Use a soft cloth or cotton swab with water to clean the lens. Care should be taken during cleaning. Allow the torch to completely dry before using. Do not use any harsh chemicals or abrasive materials when cleaning, as this may damage the torch.


MAINTENANCE

LED bulbs should not wear out under normal conditions and do not need to be replaced. All repairs should only be carried out by qualified service personnel. Opening or visible attempts to open or repair a light may void any guarantee and/or cause damage to the product or personal injury.

TRIPOD

The tripod footprint can be adjusted or completely folded away for easy storage. This is achieved by turning the dial on the base of the tripod.

1. Loosen the dial⁽²⁾ and push or pull on the black plastic upper leg holder⁽²⁾ to increase⁽¹⁾ or decrease⁽³⁾ the footprint of the tripod.
2. Tighten the dial⁽²⁾ so that the tripod legs are secure.

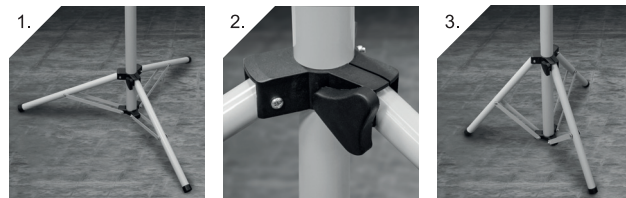

DISPOSAL OF THIS PRODUCT

If at some point you intend to dispose of this product, please keep in mind that many of its components consist of valuable materials which can be recycled. Please do not dispose of this product in the household waste bin, check instead with your local council for recycling facilities in your area.

Do not dispose of used electronics in the household waste, or expose to fire. Lighthouse hold no responsibility for personal injury or damage caused by incorrectly disposing of electronic components and wires.

GUARANTEE

Your product is guaranteed to the original purchaser for a period of **ONE YEAR** against any defects in material or workmanship, but shall not cover damage caused by misuse, abuse, alteration or accident. This product is intended for domestic and trade use.

In the case of products used for hire, the guarantee period is restricted to **THREE MONTHS** from original purchase date.

There will be some items within our range which will be non-serviceable but, in most cases we can supply replacement parts for our products. Lighthouse Torches take no responsibility for any personal injury, loss or damage caused by inappropriate or misuse of this product.



LIGHTHOUSE TORCHES

Long Reach, Galleon Boulevard, Crossways Business Park, Dartford, Kent, DA2 6QE, United Kingdom.

QFF DISTRIBUTION

24 Magna Drive, Magna Business Park, Citywest Road, Dublin 24, D24 FNYO, Ireland.



www.lighthouse-torches.com

